 


QUICK REFERENCE

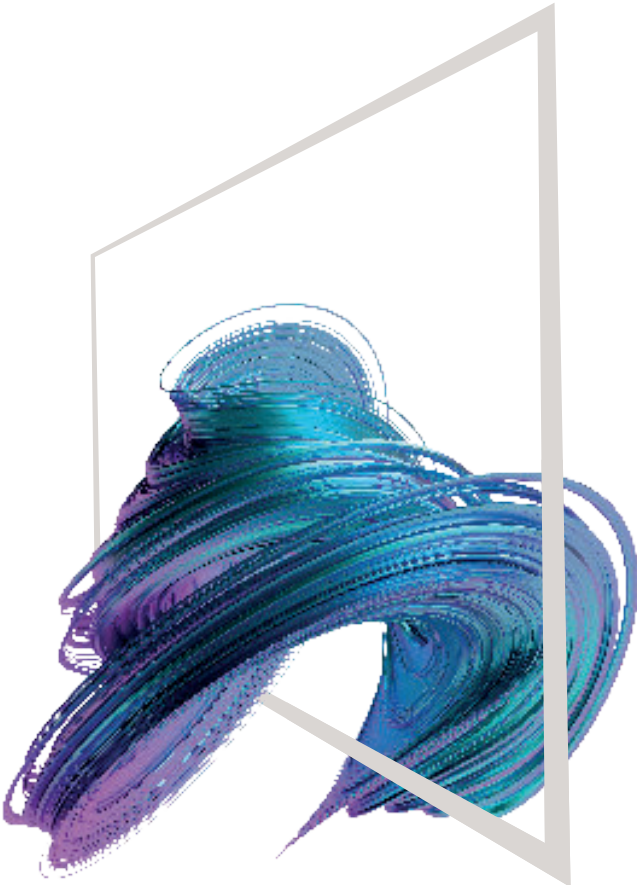

bizhub C227i

How to use the system - Panel

Touch screen

Mobile touch area

Keypad KP-101 (option)

Voice Guide (not in use for European market)

Input a value or a number

Clear a value

Status indicator

Energy Safe Mode on/off

Return to home screen

Login/logout

Start a process

Stop a process

Reset the settings

Touch screen - Home

Login/logout

Display active or standby jobs

User ID (shown when menu is open)

Configure settings/display use status

Change display language (temporarily)

Customize home screen

Open/close menu

Check warnings or notices

Check device information

Display a message

Shortcut key area*

Page indicator

* Available shortcut keys depend on machine configuration.

Operating the touch screen*

Screen gestures

1. **Tap** to select or determine a menu.
2. **Flick** to scroll a list or a page.
3. **Drag** to move a scroll bar or document.
4. **Pan** to move a displayed image.
5. **Long-tap** to display the icon related to the document.
6. **Drag & Drop** to move a document to the intended place

Displaying the keypad

Tap the numerals or the input area to display the keypad. (If the system is equipped with the optional hardware keypad KP-101, it can be used instead.)


Moving the keypad

Touch the upper side of the keypad and drag it to another display position.


* Available touch functions vary depending on displayed screen.

Basic copy functions - Make a copy


1. Position the original(s).

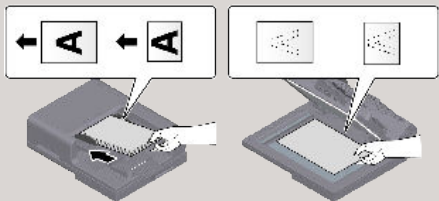


2. Tap **Copy** or **Quick Copy** on the home screen.

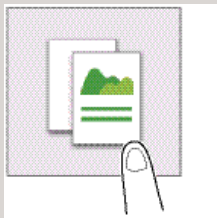


3. Set copy options as needed.

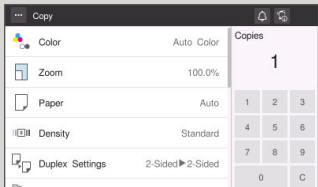

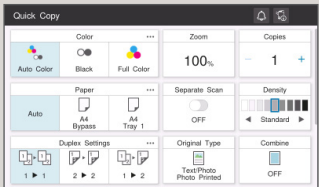

4. Press the **Start** key.

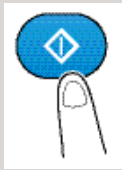

Copy operations - Basic Copy Screen*

Set current settings as default/
Return settings to factory default

Scroll bar

Specify copy settings

Copy

ColorAuto Color

Zoom100.0%

PaperAuto

DensityStandard

Duplex Settings2-Sided2-Sided

Copies1

123

456

789

0C

Number of copy sets

Enter number of copy sets

Print from USB memory

1. Position the original(s).

2. Plug the USB memory device into the USB port.

3. Tap **USB Mem. Print** on the home screen.

4. Select the desired file.

5. Specify settings as needed.

6. Press the **Start** key.

The file is printed.



| Setting* | Description |
|--------------------------|--|
| Color | Select the copy color mode (e.g. Full Color, Black & White) |
| Density | Adjust the brightness of the copy |
| Original Type | Select the image quality level of the original |
| Paper | Select paper size and type of the original/change size and type of the paper loaded in paper trays |
| Zoom | Specify enlargement or reduction ratio |
| Duplex Settings | Specify 1-sided or 2-sided scanning/copying |
| Staple | Staple the copied sheets/Select the binding position and the orientation of the original |
| Punch | Punch the copied sheets/Select the punching position and the orientation of the original |
| Group/Sort | Feed out copy sets separately by set or page |
| Combine | Copy multiple pages on a single sheet |
| Mixed Original | Scan originals of different sizes |
| Z-Folded Original | Adapt the size detection of folded originals in the ADF |
| Blank Page Removal | Skip blank pages |
| Original Size | Specify the size of the original when it is not detected correctly |
| Original Direction | Select orientation of the original loaded into ADF or placed on the original glass |
| Separate Scan | Scan a large number of originals in several batches / scan originals using both ADF and original glass |
| Automatic Image Rotation | Rotate the original image according to paper direction (switched on as default) |

*Available settings depend on system configuration.

Zoom

1. Position the original(s).

2. Tap **Copy** on the home screen.

3. Tap **Zoom**.

4. Tap **Other paper sizes**.

5. Make the desired settings.

6. Tap **OK**.

7. Press the **Start** key.

Change zoom manually

Zoom

100.0%
(25.0 - 400.0)

Auto

Reduce

A3B4 A4B5

B4A4

x1.0

Enlarge

B4A3 B5A4

A4B4

100%

115.4%

Copy in the same size as the original

Preset zoom values (can be changed)


Automatically reduce/enlarge original size to paper size

Duplex Settings

1. Position the original(s).

2. Tap **Copy** on the home screen.

3. Tap **Duplex Settings**.

4. Tap .

5. Make the desired settings.

6. Tap **OK**.

7. Press the **Start** key.

Duplex Settings

Original > Copy

Org. Binding Pos.

Output Binding Direction

Original Direction

2-Sided2-Sided

Auto

Auto

>

Select 1-sided or 2-sided scanning > copying

 
Specify the binding position of the original

Specify the binding position for the copies

Select orientation of the original loaded into ADF or placed on the original glass

Scan operations - Settings*

View scan destinations as buttons or as list

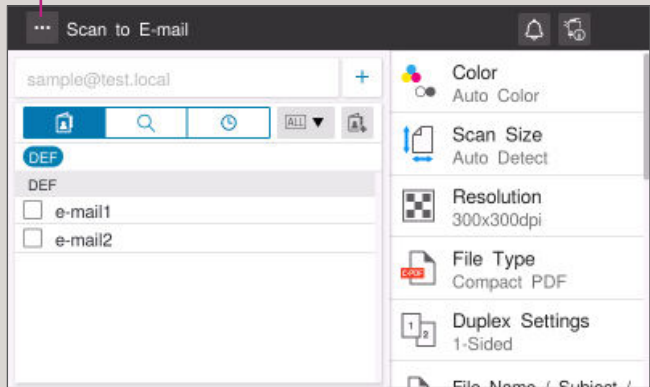

| Setting* | Description |
|-------------------------|---|
| Color | Select the scan color mode (Full Color, Black&White) |
| Scan Size | Specify the original size |
| Resolution | Specify the scan resolution |
| File Type | Specify the file type for saving |
| Duplex Settings | Specify 1-sided or 2-sided scanning |
| File Name/Subject/Other | Change the file name, E-mail subject, or message text |
| Separate Scan | Scan a large number of originals in several batches /scan originals using both ADF and original glass |
| Mixed Original | Scan originals of different sizes |
| Z-Folded Original | Adapt the size detection of folded originals in the ADF |
| Blank Page Removal | Skip blank pages |
| Original Direction | Select orientation of the original loaded into ADF or placed on the original glass |
| Original Type | Select the image quality level of the original |
| Density | Adjust the scan brightness |
| Background Removal | Adjust the the background brightness (e.g. for originals with colored background) |

 
*Available settings depend on system configuration.

Scan to e-mail (Direct input)

1. Position the original(s).
2. Tap **Scan to E-mail** on the home screen.
3. Tap **+**.

sample@test.local


4. Enter the destination address.
5. Tap **OK**.
6. Specify settings as needed.

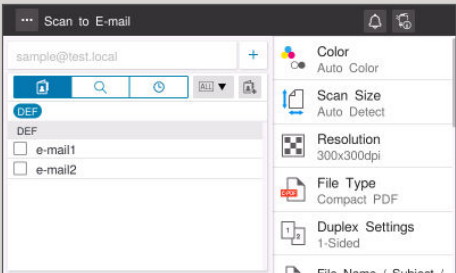

7. Press the **Start** key
The file is sent.

Search for a destination (address book)


 
1. Position the original(s).
2. Tap **Scan to E-mail**, **Scan to Box** or **Scan to PC**.
3. Select the search tab:
4. Select **Name Search**, **Address Search** or **Search Box No.**

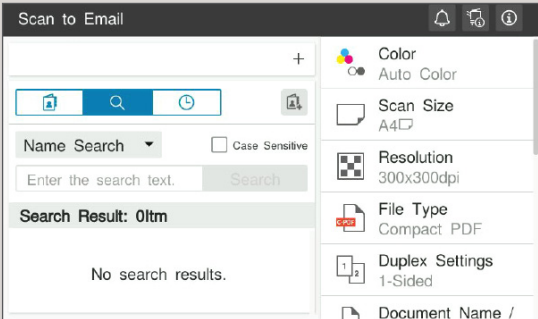

5. Enter the search text and tap **Search**.
6. Specify the target destination from the search result.
7. Press the **Start** key.
The file is sent.


Save file on a PC

  1. Position the original(s).
2. Tap **Scan to PC** on the home screen.
3. Select the desired destination.
4. Specify settings as needed.
5. Press the **Start** key.
The file is saved.

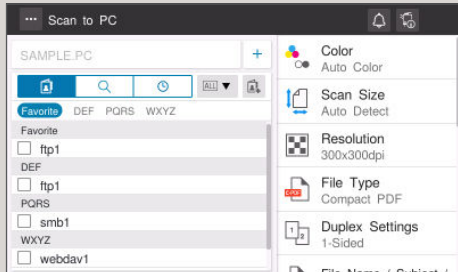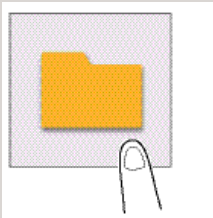

Register a destination (address book)

 
1. Tap **Utility** on the home screen.
2. Tap **Utility > Store Address > Address Book**.
3. Tap **New Registration**
4. Select the type of destination you want to register.

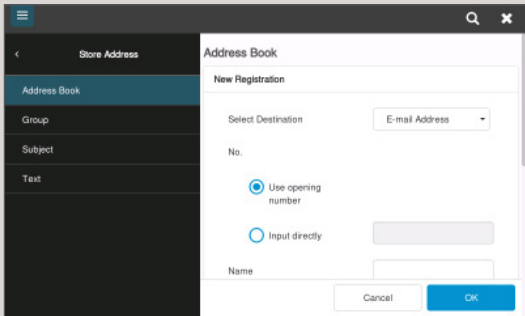

5. Enter the destination information and tap **OK**.

Fax operations - Send a fax (direct input)*

 1. Position the original(s).
2. Tap **Fax** on the home screen.
3. Tap the direct input tab:
4. Enter the fax number.
5. Specify settings as needed.
6. Press the **Start** key.
The file is sent.

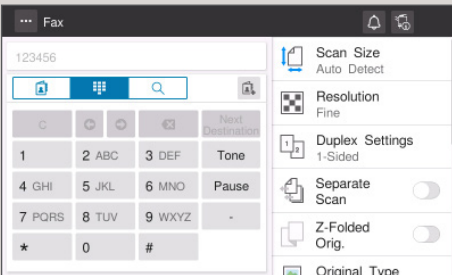

* only with fax option

Sending data to multiple destinations/using the address book

1. Position the original(s).
2. Tap **Scan to E-mail**, **Scan to Box** or **Scan to PC**.
3. Select the destination tab:
4. Specify two or more destinations.
or
Specify a group.
5. Tap **OK**.
6. Press the **Start** key.
The file is sent.

