

QUICK REFERENCE



bizhub C3321i

How to use the system – Panel

Labels for the control panel:

- Touch screen
- Keypad KP-P03 (option)
- Input a value or a number
- Clear a value
- Status indicator
- Energy Safe Mode on/off
- Return to home screen
- Login/logout
- Start a process
- Stop a process
- Reset the settings

Touch screen – Home

Labels for the home screen:

- User ID (shown when menu is open)
- Configure settings/display use status
- Change display language (temporarily)
- Customize home screen
- Open/close menu
- Login/logout
- Display active or standby jobs
- Check warnings or notices
- Check device information
- Display a message
- Shortcut key area*
- Page indicator

*Available shortcut keys depend on machine configuration.

Operating the touch screen*

Screen gestures:

- Tap** to select or determine a menu.
- Flick** to scroll a list or a page.
- Drag** to move a scroll bar or document.
- Pan** to move a displayed image.

Displaying the keypad

Tap the numerals or the input area to display the keypad.
(If the system is equipped with the optional hardware keypad KP-P03, it can be used instead.)


Moving the keypad

Touch the upper side of the keypad and drag it to another display position.

*Available touch functions vary depending on displayed screen.

Basic copy functions - Make a copy


1. Position the original(s).

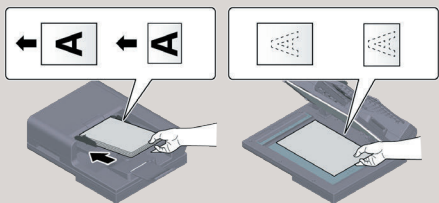

2. Tap **Copy** or **Quick Copy** on the home screen.



3. Set copy options as needed.

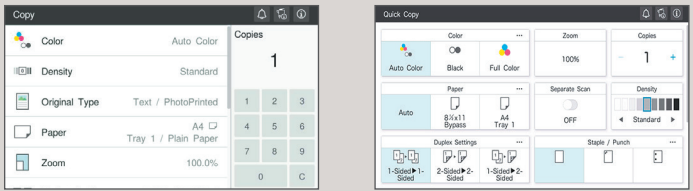


4. Tap **Start**.



Copy operations – Basic Copy Screen*

Specify copy settings

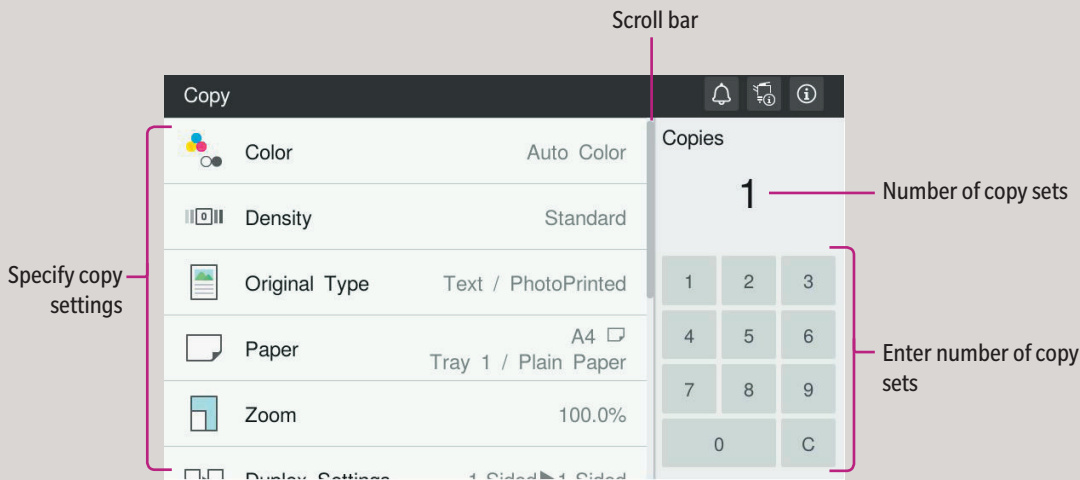

Setting*	Description
Color	Select the copy color mode (e.g. Full Color, Black & White)
Density	Adjust the brightness of the copy
Original Type	Select the image quality level of the original
Paper	Select paper size and type of the original/change size and type of the paper loaded in paper trays
Zoom	Specify enlargement or reduction ratio
Duplex Settings	Specify 1-sided or 2-sided scanning/copying
Group/Sort	Feed out copy sets separately by set or page
Combine	Copy multiple pages on a single sheet
Mixed Original	Scan originals of different sizes
Blank Page Removal	Skip blank pages
Original Size	Specify the size of the original when it is not detected correctly
Original Direction	Select orientation of the original loaded into ADF or placed on the original glass
Separate Scan	Scan a large number of originals in several batches / scan originals using both ADF and original glass

Print from USB memory

1. Position the original(s).

2. Plug the USB memory device into the USB port.


3. Tap **External Memory Print** on the home screen.

4. Select the desired file.

5. Specify settings as needed.

6. Tap **Start**.

The file is printed.

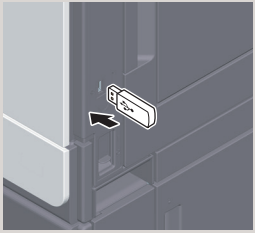

*Available settings depend on system configuration.

Zoom

1. Position the original(s).

2. Tap **Copy** on the home screen.


3. Tap **Zoom**.

4. Make the desired settings.

5. Tap **OK**.

6. Tap **Start**.

Change zoom manually

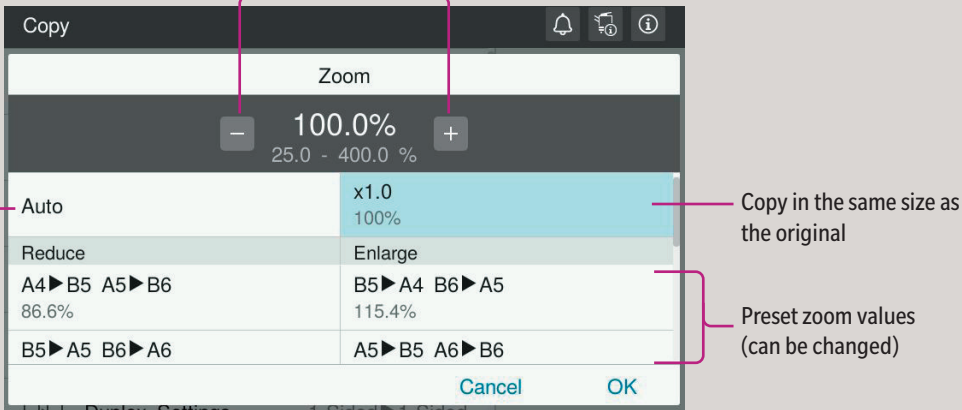


Duplex Settings

1. Position the original(s).

2. Tap **Copy** on the home screen.

3. Tap **Duplex Settings**.


4. Tap .

5. Make the desired settings.

6. Tap **OK**.

7. Press the **Start** key.


Select 1-sided or 2-sided scanning > copying

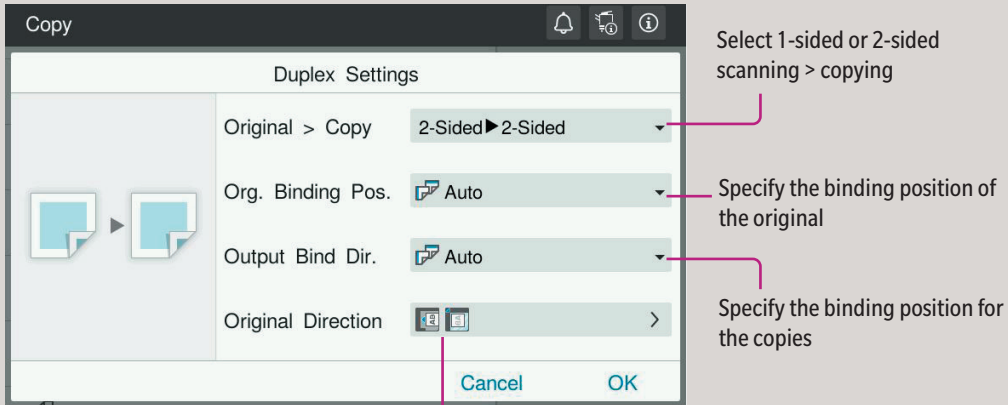

Giving Shape to Ideas

Scan operations – Settings*

 View scan destinations as buttons or as list

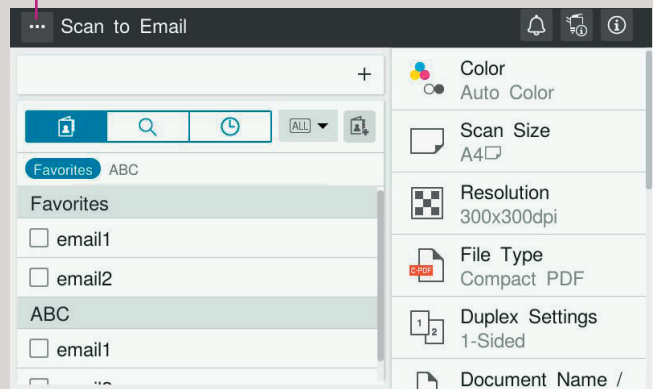


Setting*	Description
Color	Select the scan color mode (Full Color, Black&White)
Scan Size	Specify the original size
Resolution	Specify the scan resolution
File Type	Specify the file type for saving
Duplex Settings	Specify 1-sided or 2-sided scanning
Document Name/Subject/Other	Change the file name, E-mail subject, or message text.
Separate Scan	Scan a large number of originals in several batches /scan originals using both ADF and original glass
Mixed Original	Scan originals of different sizes
Blank Page Removal	Skip blank pages
Original Direction	Select orientation of the original loaded into ADF or placed on the original glass
Original type	Select the image quality level of the original
Density	Adjust the scan brightness
Background Removal	Adjust the the background brightness (e.g. for originals with colored background)

*Available settings depend on system configuration.

Scan to e-mail (Direct input)

 
1. Position the original(s).
2. Tap **Scan to Email** on the home screen.
3. Tap **+**.

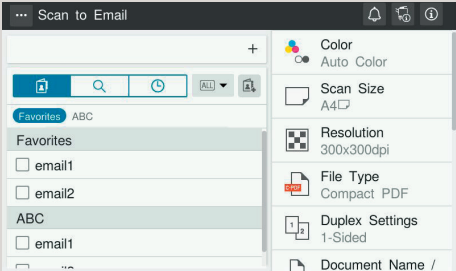


4. Enter the destination address.
5. Tap **OK**.
6. Specify settings as needed.

7. Tap **Start**.
- The file is sent.

Search for a destination (address book)

 
1. Position the original(s).
2. Tap **Scan to Email**, **Scan to Box** or **Scan to PC**.
3. Select the search tab: 
4. Select **Name Search**, **Address Search** or **Search Box No**.

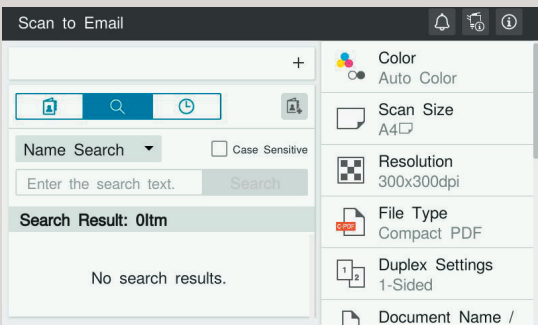

5. Enter the search text and tap **Search**.
 6. Specify the target destination from the search result.
 7. Tap **Start**.
- The file is sent.


Save file on a PC

 1. Position the original(s).
 2. Tap **Scan to PC** on the home screen.
 3. Select the desired destination.
 4. Specify settings as needed.
 5. Tap **Start**.
- The file is saved.

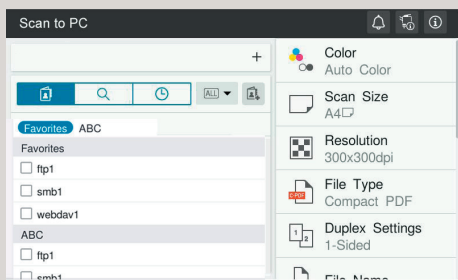


Register a destination (address book)

 
1. Tap **Utility** on the home screen.
2. Tap **Utility > Store Address > Address Book**.
3. Tap **New Registration**
4. Select the type of destination you want to register.

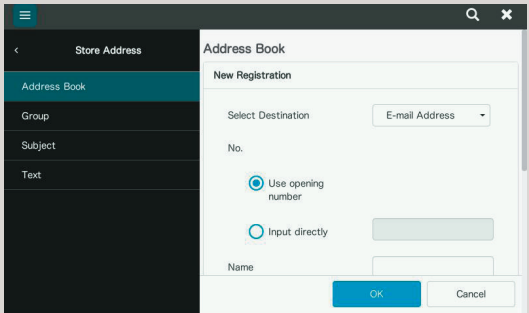

5. Enter the destination information and tap **OK**.


Fax operations – Send a fax (direct input)*

 1. Position the original(s).
 2. Tap **Fax** on the home screen.
 3. Tap the direct input tab: 
 4. Enter the fax number.
 5. Specify settings as needed.
 6. Tap **Start**.
- The file is sent.

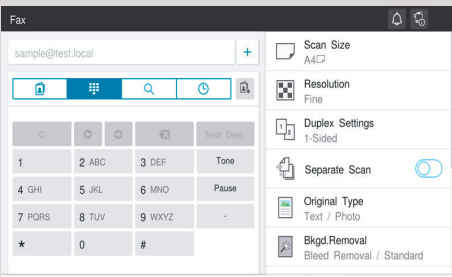

* only with fax option

Sending data to multiple destinations/using the address book

1. Position the original(s).
 2. Tap **Scan to Email**, **Scan to Box** or **Scan to PC**.
 3. Select the destination tab: 
 4. Specify two or more destinations.
- or
- Specify a group.
5. Tap **OK**.
 6. Tap **Start**.
- The file is sent.

