

bizhub C3850/C3350 BASIC OPERATIONS

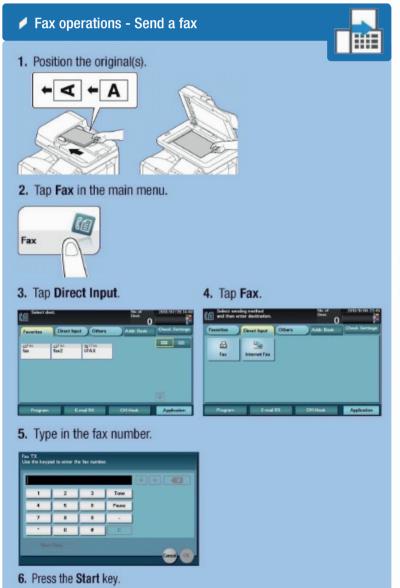


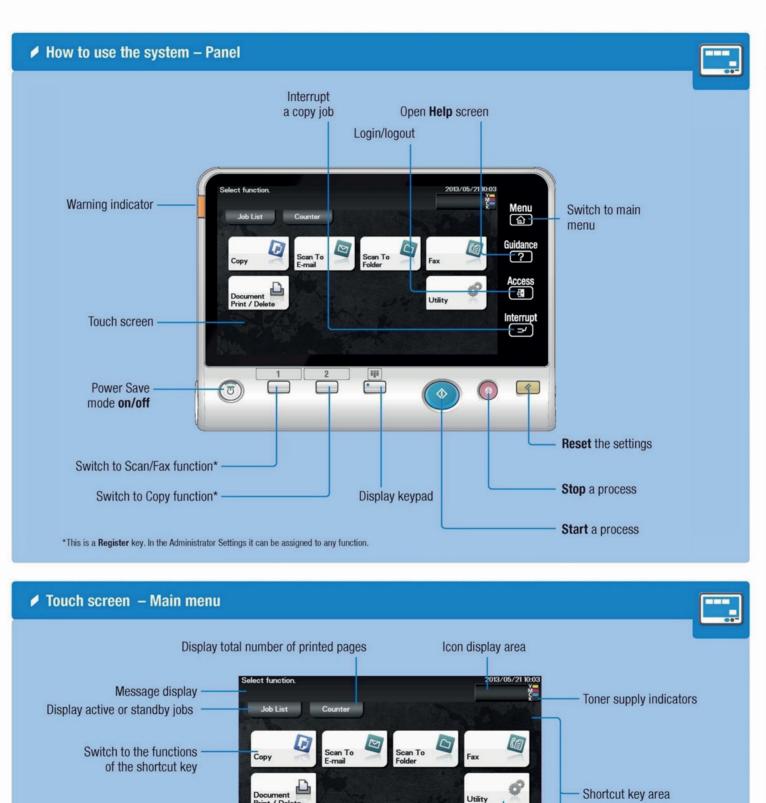






Configure settings/ check consumable life

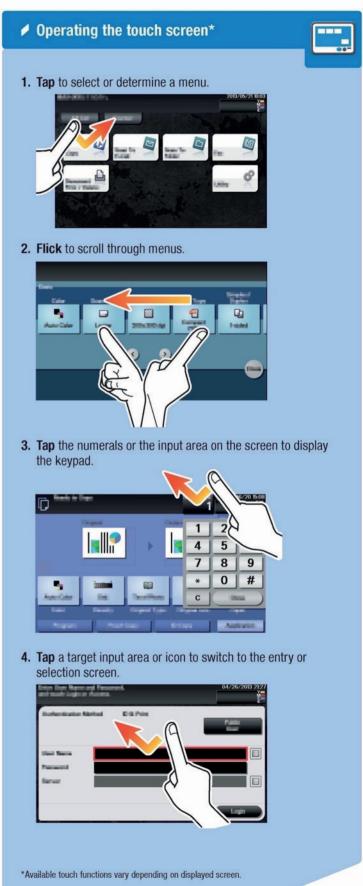



bizhub C3850/C3350 COPYING




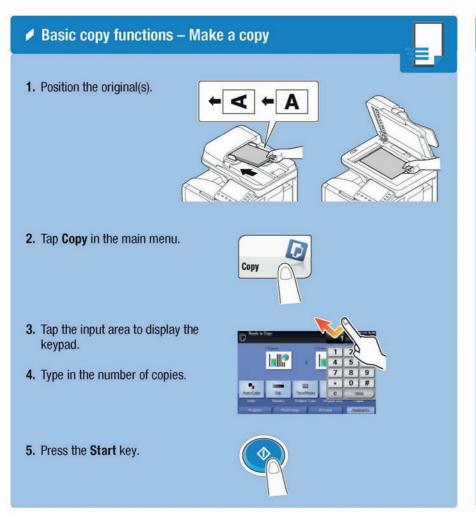



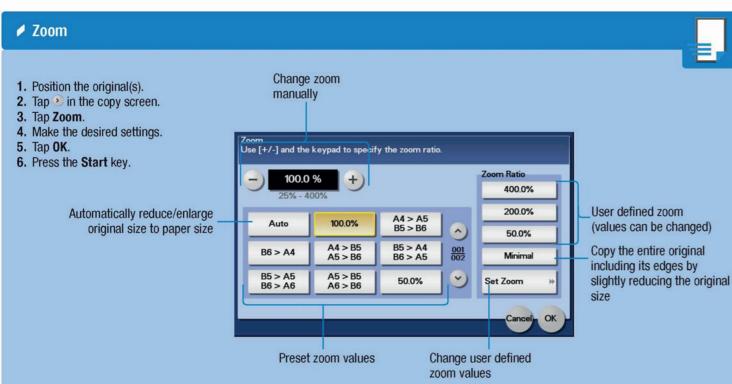


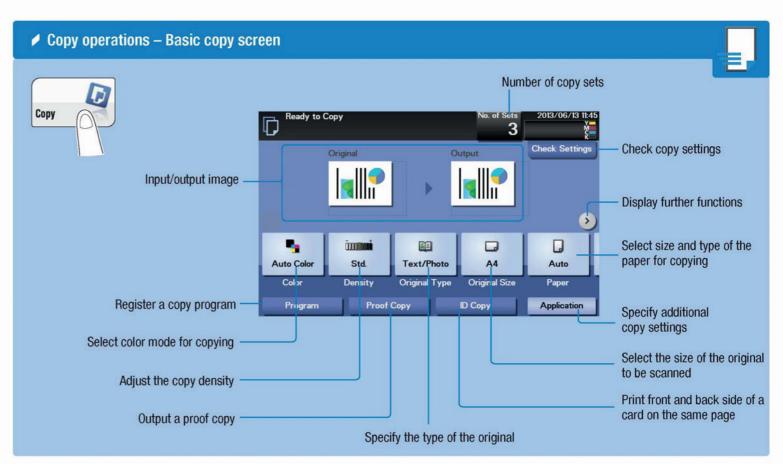


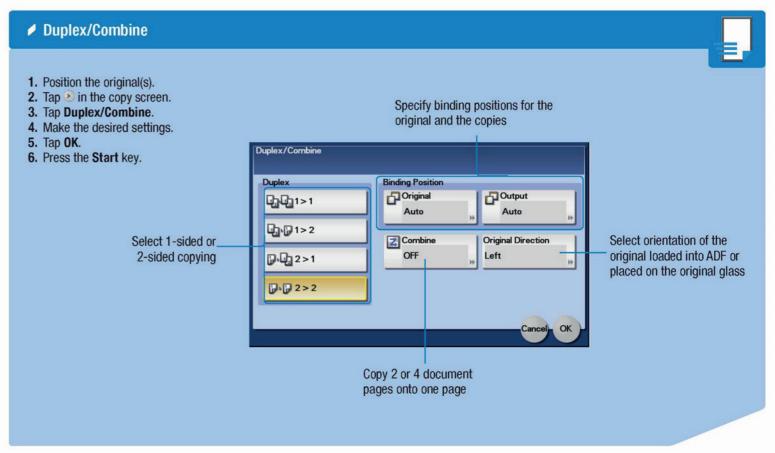


bizhub C3850/C3350 SCANNING



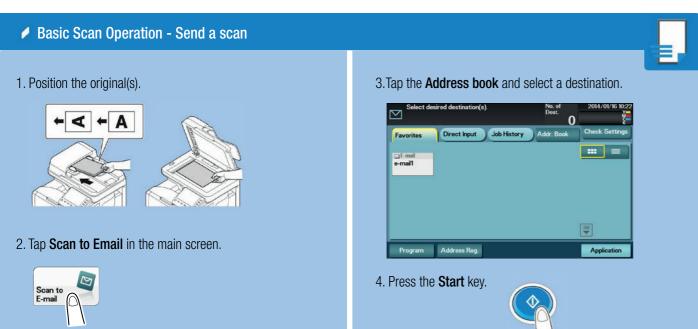

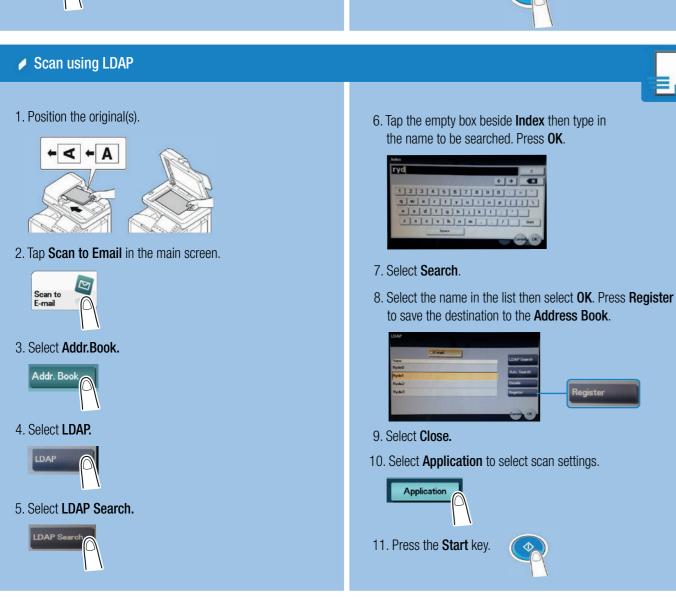

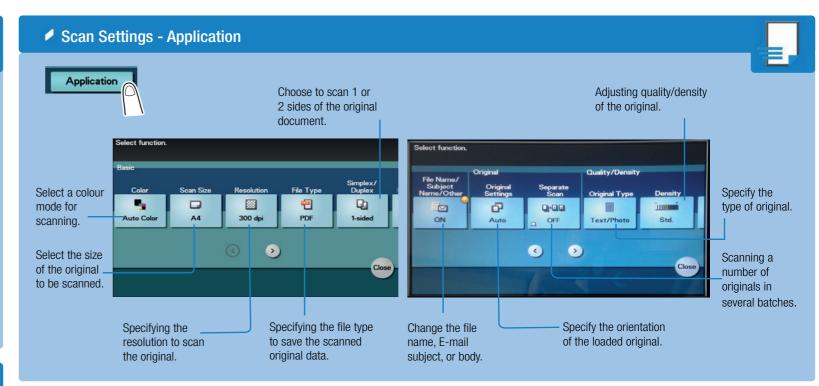

Secure Printing Send a job to print 1. In an open document select File, Print then Printing

Preferences. Under the Basic tab select **Secured Job** from the Job Retention drop down box.



2. Type in a Password then select OK.



3. Select **OK**, then **Print**.

Release Secure Print

1. Tap **Document Print/Delete** in the main screen.



2. Select Documents to Print.



- 3. Select a User, then select a document to release.
- 4. Tap the blank space next to Password, then type in the password.



5. Enter amount of copies to print then press **OK**.

