

QUICK
REFERENCE



How to use the system - Panel

Labels for the panel:

- Status indicator
- Touch panel
- Keypad KP-102 (option)
- Log in/log out
- Voice guide
- Return to home screen
- Display help
- Enlarge display*
- Enter a value or a number
- Clear a value
- Reset the settings
- Stop a process
- Start a process
- Power indicator
- Energy Safe Mode on/off

*with Classic Style

Touch screen - Home

Labels for the touch screen:

- User ID (shown when menu is open)
- Configure settings/display use status
- Change display language (temporarily)
- Customize home screen
- Open/close menu
- Login/logout
- Display active or standby jobs
- Check warnings or notices
- Check device information
- Display a message
- Shortcut key area*
- Page indicator

*Available shortcut keys depend on machine configuration.

Operating the touch screen*

Screen gestures

- Tap** to select or determine a menu.
- Click** to scroll a list or a page.
- Drag** to move a scroll bar or document.
- Pan** to move a displayed image.

Displaying the keypad

Tap the numerals or the input area to display the keypad.
(If the system is equipped with the optional hardware keypad KP-102, it can be used instead.)


Moving the keypad

Touch the upper side of the keypad and drag it to another display position.


*Available touch functions vary depending on displayed screen.

Basic copy functions - Make a copy


1. Position the original(s).

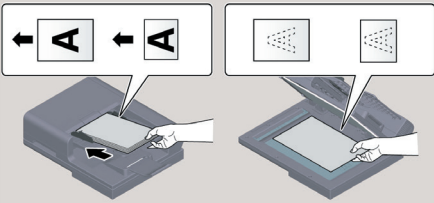


2. Tap Copy or Quick Copy on the home screen.



3. Set copy options as needed.

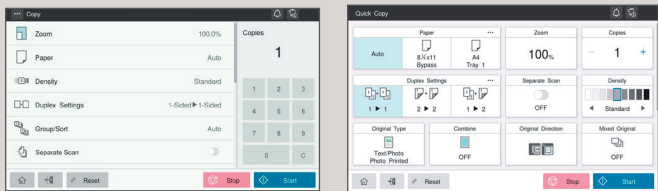

4. Tap Start.



Copy operations - Basic Copy Screen/Quick Copy Screen*

Set current settings as default/
Return settings to factory default

Specify copy settings

Return to home screen

Login/logout

Return settings to default

Zoom

Paper

Density

Duplex Settings

Group/Sort

Separate Scan

100.0%

Auto

Standard

1-Sided ▶ 1-Sided

Auto

Off

Copy

1

1 2 3

4 5 6

7 8 9

0 C

Stop

Start

Quick Copy

Paper

Zoom

Copies

Duplex Settings

Separate Scan

Density

Original Type

Combine

Original Direction

Mixed Original

8 1/2 x 11 Bypass

A4 Tray 1

100%

1

1 ▶ 1

2 ▶ 2

1 ▶ 2

Text/Photo Photo Printed

OFF

OFF

OFF

Stop

Start

| Setting* | Description |
|--------------------------|--|
| Zoom | Specify enlargement or reduction ratio |
| Paper | Select paper size and type of the original/change size and type of the paper loaded in paper trays |
| Density | Adjust the brightness of the copy |
| Duplex Settings | Specify 1-sided or 2-sided scanning/copying |
| Staple | Staple the copied sheets/Select the binding position and the orientation of the original |
| Punch | Punch the copied sheets/Select the punching position and the orientation of the original |
| Group/Sort | Feed out copy sets separately by set or page |
| Separate Scan | Scan a large number of originals in several batches/scan originals using both ADF and original glass |
| Original Type | Select the image quality level of the original |
| Combine | Copy multiple pages on a single sheet |
| Original Direction | Select orientation of the original loaded into ADF or placed on the original glass |
| Mixed Original | Scan originals of different sizes |
| Thin Paper Original | Adapt the original feed speed to thin originals |
| Z-Folded Original | Adapt the size detection of folded originals in the ADF |
| Blank Page Removal | Skip blank pages |
| Multi-Feed Detection | Prevent scanning errors |
| Original Size | Specify the size of the original when it is not detected correctly |
| Automatic Image Rotation | Rotate the original image according to paper direction (switched on as default) |

*Available settings depend on system configuration.

Zoom

1. Position the original(s).

2. Tap Copy on the home screen.

3. Tap Zoom.

4. Tap Other paper sizes.

5. Make the desired settings.

6. Tap OK.

7. Tap Start.

Automatically reduce/enlarge original size to paper size

Change zoom manually

Copy in the same size as the original

Preset zoom values

Copy

Zoom

100.0%

25.0 - 400.0 %

Auto

Reduce

A3 ▶ B4 A4 ▶ B5

86.6%

B4 ▶ A4

81.6%

Enlarge

B4 ▶ A3 B5 ▶ A4

115.4%

A4 ▶ B4

122.4%

Cancel

OK


Giving Shape to Ideas

Duplex Settings

1. Position the original(s).

2. Tap **Copy** on the home screen.


3. Tap **Duplex Settings**.

4. Tap .

5. Make the desired settings.

6. Tap **OK**.

7. Tap **Start**.

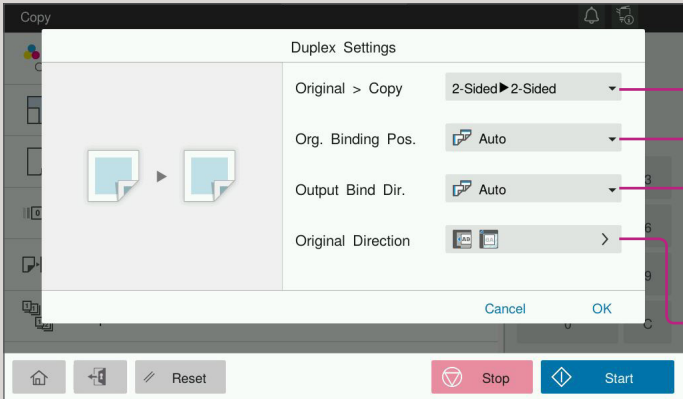

Select 1-sided or 2-sided scanning > copying

Specify the binding position of the original


Specify the binding position for the copies

Select orientation of the original loaded into ADF or placed on the original glass


Scan to e-mail (Direct input)

1. Position the original(s).

2. Tap **Scan to Email** on the home screen.




3. Tap **+**.



4. Enter the destination address.

5. Tap **OK**.

6. Specify settings as needed.

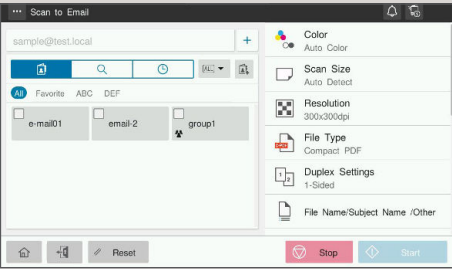


7. Tap **Start**.

The file is sent.


Save file on a PC

1. Position the original(s).

2. Tap **Scan to PC** on the home screen.



3. Select the desired destination.

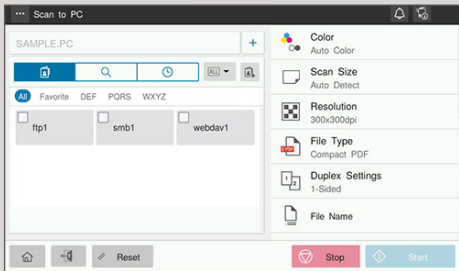


4. Specify settings as needed.

5. Tap **Start**.

The file is saved.

Scan operations - Settings*

View scan destinations as buttons or as list

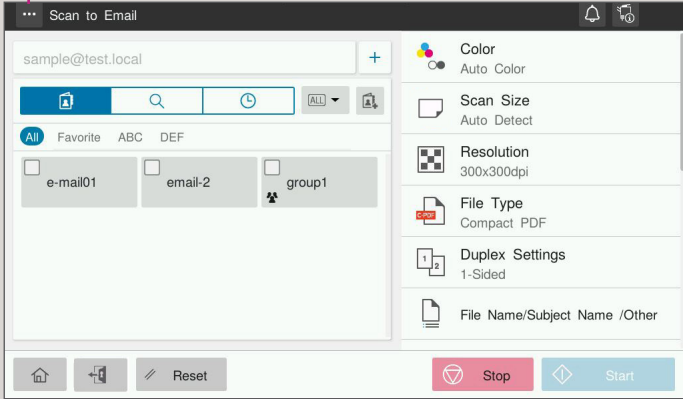


| Setting* | Description |
|------------------------------------|--|
| Color | Select the scan color mode (Full Color, Black&White) |
| Scan Size | Specify the original size |
| Resolution | Specify the scan resolution |
| File Type | Specify the file type for saving |
| Duplex Settings | Specify 1-sided or 2-sided scanning |
| Document Name/Subject/Other | Change the file name, e-mail subject, or message text. |
| Separate Scan | Scan a large number of originals in several batches / scan originals using both ADF and original glass |
| Mixed Original | Scan originals of different sizes |
| Thin Paper Original | Adapt the original feed speed to thin originals |
| Z-Folded Original | Adapt the size detection of folded originals in the ADF |
| Blank Page Removal | Skip blank pages |
| Multi-Feed Detection | Prevent scanning errors |
| Original Direction | Select orientation of the original loaded into ADF or placed on the original glass |
| Original Type | Select the image quality level of the original |
| Density | Adjust the scan brightness |
| Background Removal | Adjust the the background brightness (e.g. for originals with colored background) |

Sending data to multiple destinations/using the address book

1. Position the original(s).

2. Tap **Scan to Email**, **Scan to Box** or **Scan to PC**.


3. Select the destination tab. .

4. Specify two or more destinations.
or
Specify a group.

5. Tap **OK**.

6. Tap **Start**.

The file is sent.

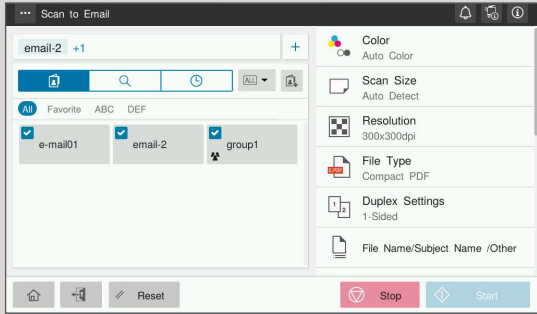

Giving Shape to Ideas



 
KONICA MINOLTA

bizhub 650i/550i/450i/360i/300i

Search for a destination (address book)



1. Position the original(s).
2. Tap **Scan to Email**, **Scan to Box** or **Scan to PC**.
3. Select the search tab.
4. Select **Name Search**, **Address Search** or **Search Box No.**

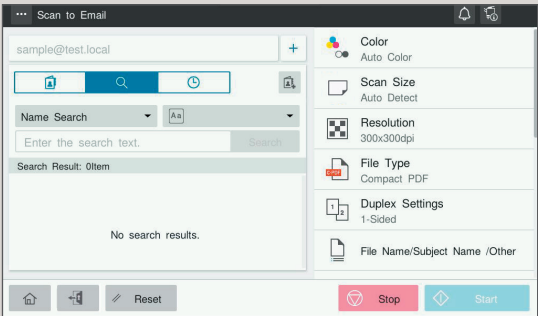


5. Enter the search text and tap **Search**.
6. Specify the target destination from the search result.
7. Tap **Start**.
The file is sent.

Register a destination (address book)



 1. Tap **Utility** on the home screen.
2. Tap **Utility > Store Address > Address Book**.
3. Tap **New Registration**
4. Select the type of destination you want to register.

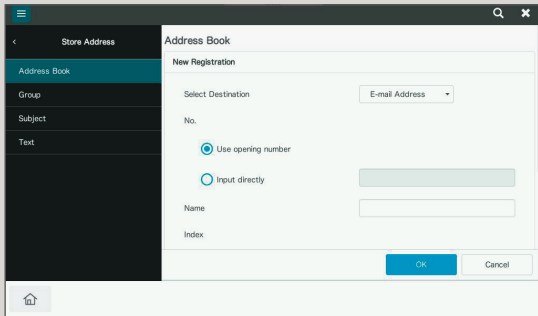


5. Enter the destination information and tap **OK**.

Save file in a user box



 1. Position the original(s).
2. Tap **Scan to Box** on the home screen.
3. Select the desired user box.

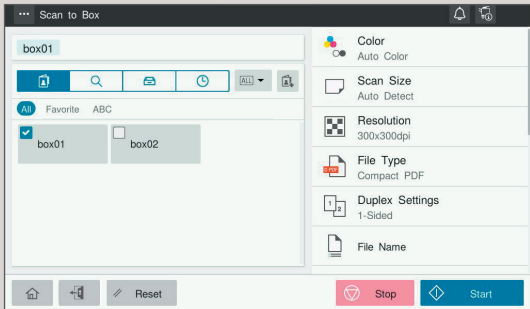


4. Specify settings as needed.
5. Tap **Start**.
The file is saved.

Create a user box



 1. Tap **Utility** on the home screen.
2. Tap **Utility > Box > User Box List**.
3. Tap **New Registration**
4. Enter the destination information and tap **OK**.

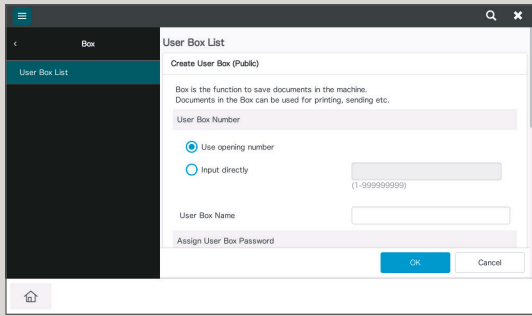


Print from USB memory




1. Position the original(s).
2. Plug the USB memory device into the USB port.



 3. Tap **USB Mem. Print** on the home screen.
4. Select the desired file.

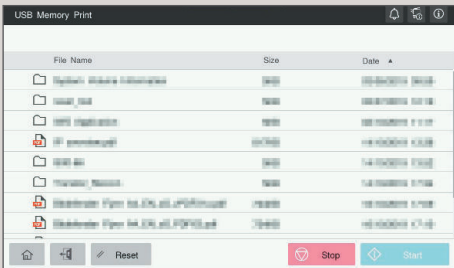

 5. Specify settings as needed.

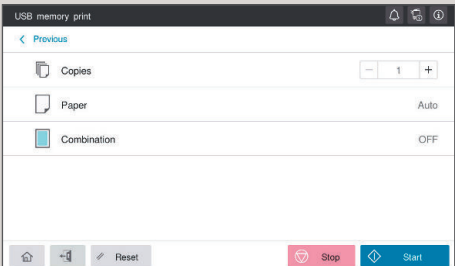


6. Tap **Start**.
The file is printed.


Fax operations - Send a fax (direct input)*



 1. Position the original(s).

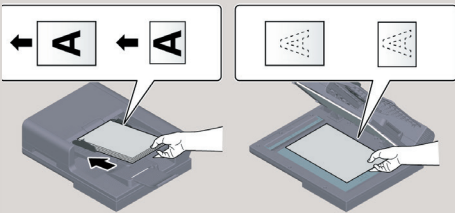


 2. Tap **Fax** on the home screen.

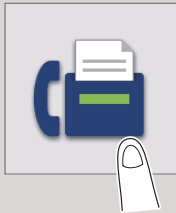

3. Tap the direct input tab.

 4. Enter the fax number.

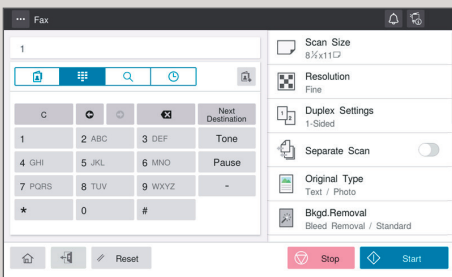

5. Tap **OK**.
6. Specify settings as needed.
7. Tap **Start**.



The file is sent.

* only with fax option