



QUICK REFERENCE





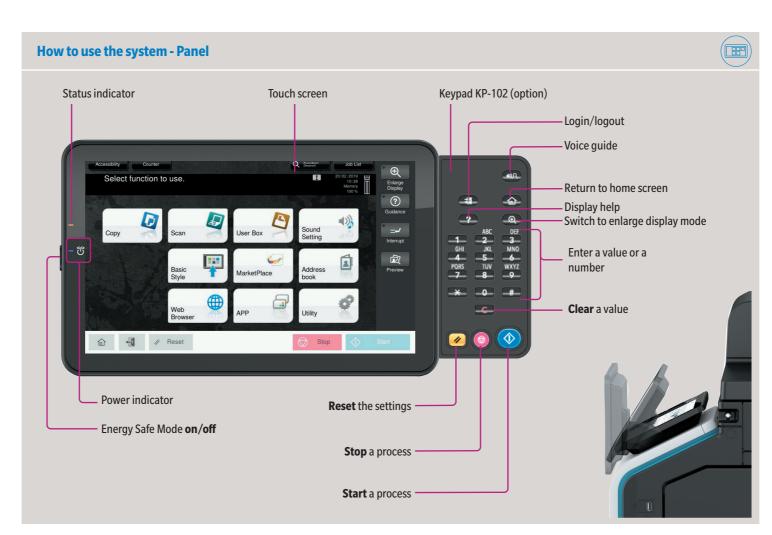

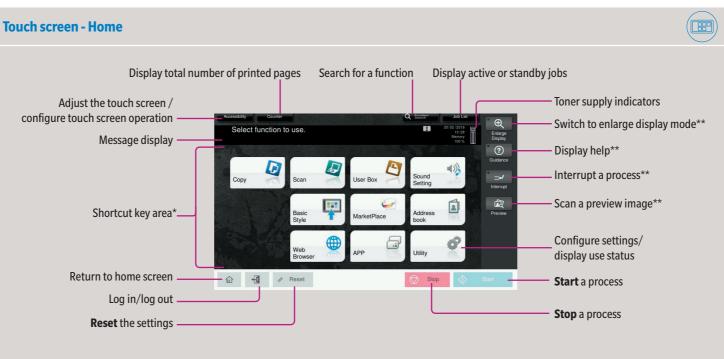

* Up to 25 shortcut keys assigned to any function can be displayed in three screens. Utility is always displayed fixed on the lower right of the first page.

This is a **Register key. In the Administrator Settings it can be assigned to any function.

bizhub 4751i/4051i

Operating the touch screen*



1. Tap to select or determine a menu.



2. Double-tap to retrieve detailed information or enlarge a thumbnail image.



3. Drag to move a display position on an application or preview screen.



4. Flick to scroll an address or job list and feed thumbnail-view pages.



5. Long-tap to display the icon related to the document.



6. Drag & Drop to move a document to the intended place.



7. Pan to move a displayed image.



8. Pinch-in/Pinch-out to enlage or reduce a preview image.



9. Rotate two fingers to rotate a preview image.



*Available touch functions vary depending on displayed screen.



Operation of keypad*

1. Tap the numerals or the input area on the screen to display the keypad.



2. If necessary, touch the upper side of the keypad and drag it to another display position.



*If the system is equipped with the optional hardware keypad KP-102, it can be used instead.

Zoom


4. Tap OK.

5. Tap Start.

1. Position the original(s).

2. Tap Zoom in the copy screen.

3. Make the desired settings.

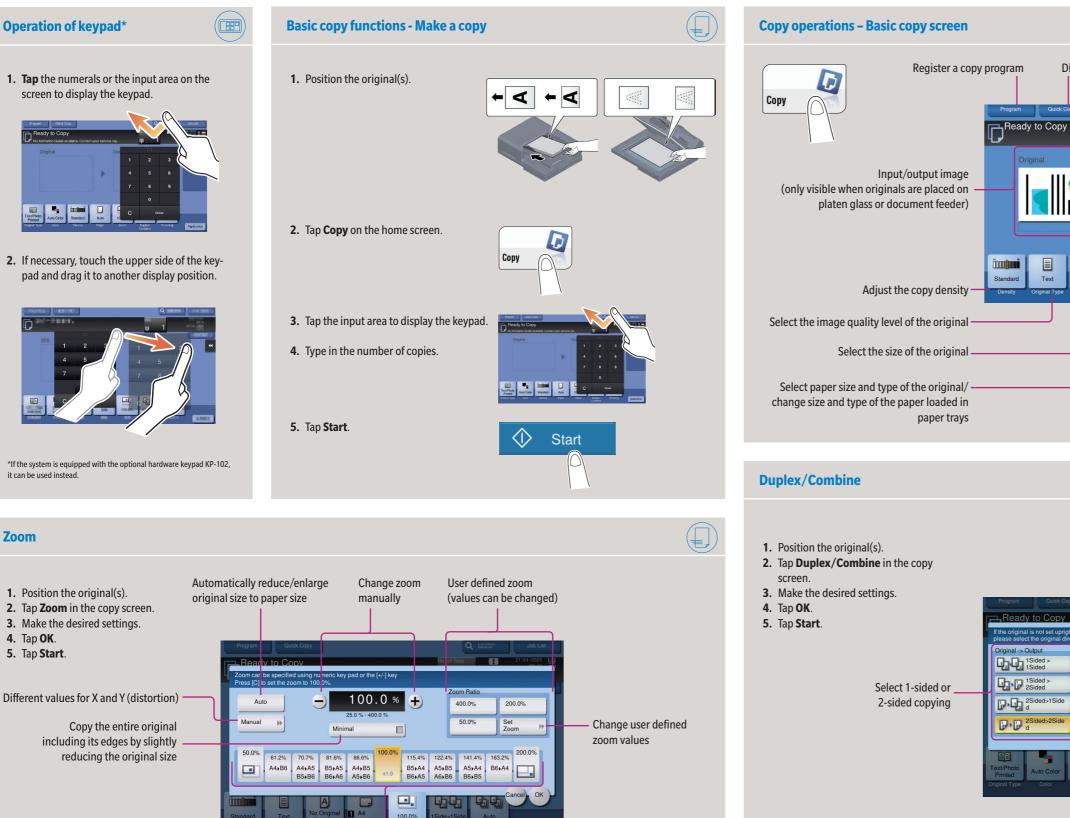

Preset zoom values


Left Bind

Right Bind

Top Bind

Α

bizhub 4751i/4051i

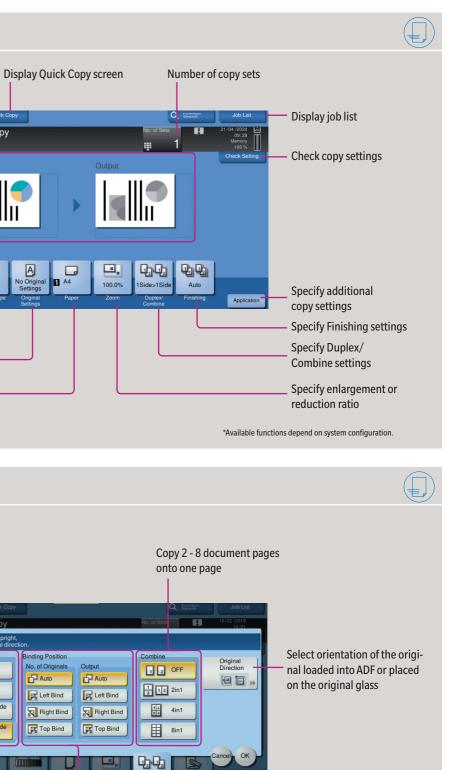


Specify binding positions for the original and the copies

ide>1S

Giving Shape to Ideas



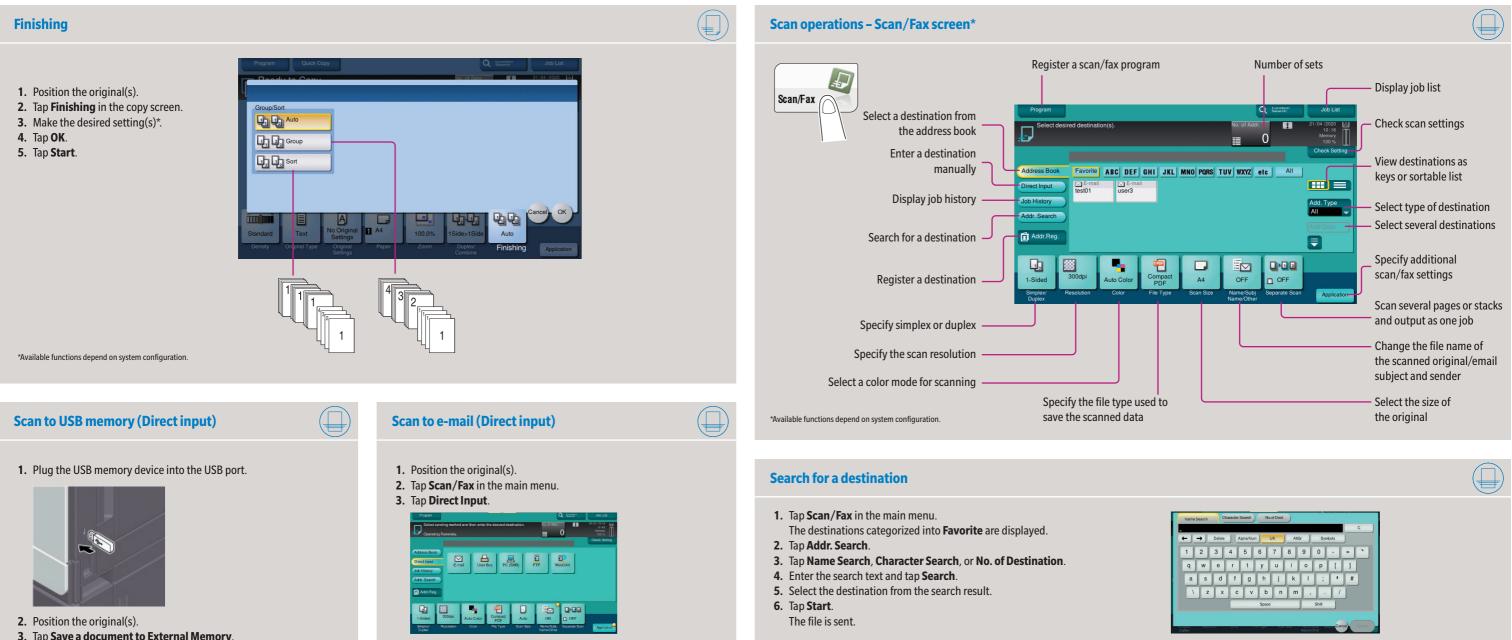

- 3. Tap Save a document to External Memory



- **4.** Make the desired setting(s).
- 5. Tap Start. The file is saved.



- 4. Tap E-mail.
- 5. Enter the destination address.



6. Tap OK. 7. Tap Start. The file is sent.


- Sending data to multiple destinations
- 1. Position the original(s).
- 2. Tap Scan/Fax in the main menu. The destinations categorized into Favorite are displayed.
- 3. Tap Add. Type.
- 4. Select the desired type of destination.
- 5. Specify a destination.
- 6. Tap Add Dest.
- 7. Specify the next destination and confirm with Yes.
- 8. Repeat Step 6 and 7 until all desired destinations are specified.
- 9. Tap Start.
- The file is sent.

bizhub 4751i/4051i



Giving Shape to Ideas



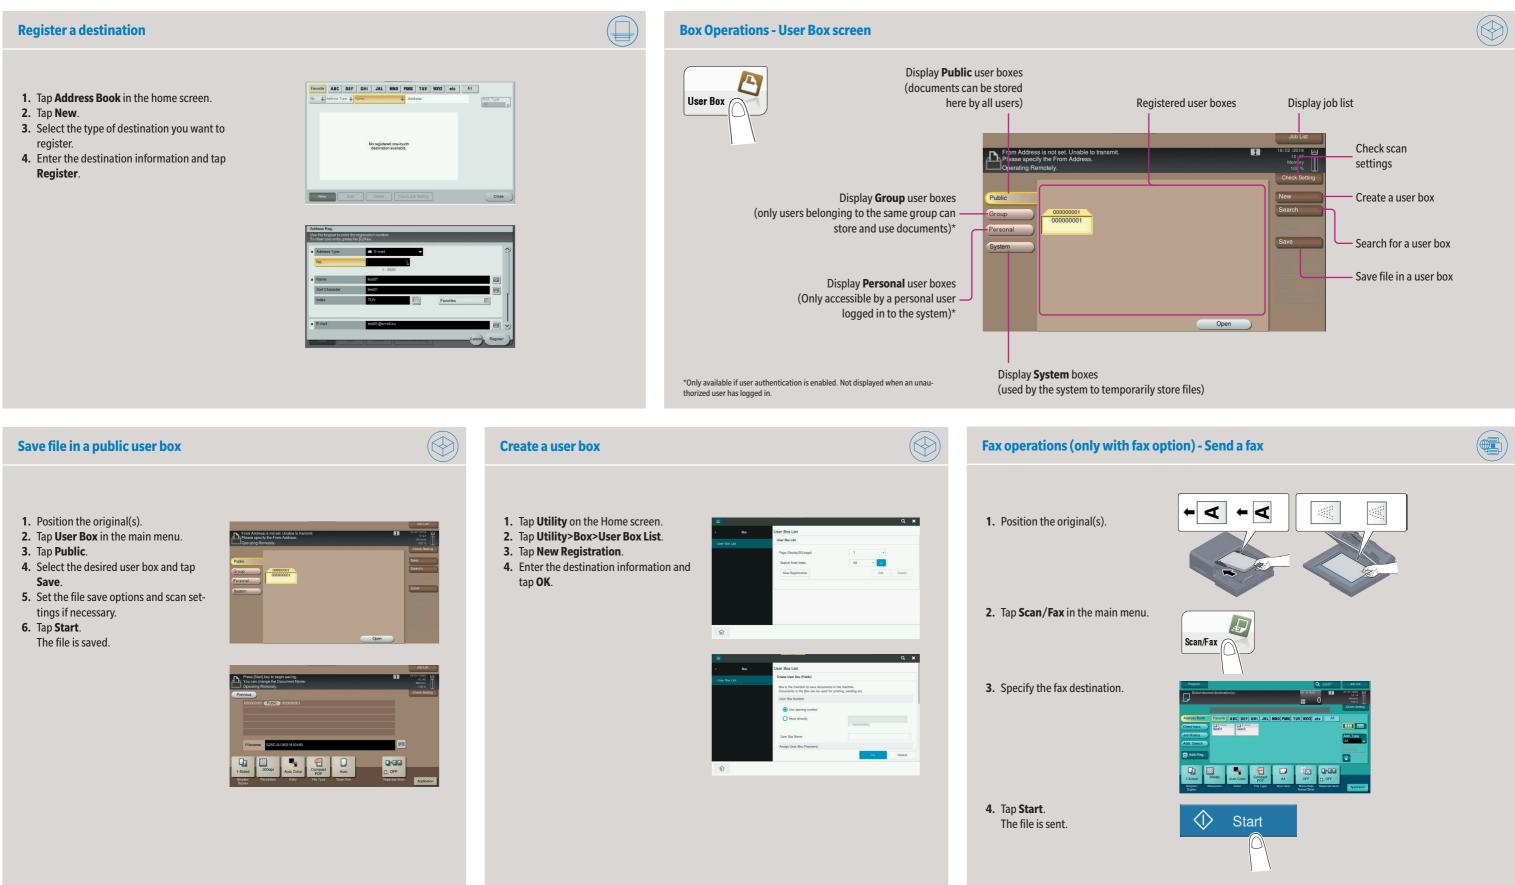

bizhub 4751i/4051i

Giving Shape to Ideas